


USER'S MANUAL

Digital Combo Signal Finder

We operate a policy of technically change without prior notice, the picture of outlook and color is for a reference only, the actual item is the standard.

FRONT PANEL

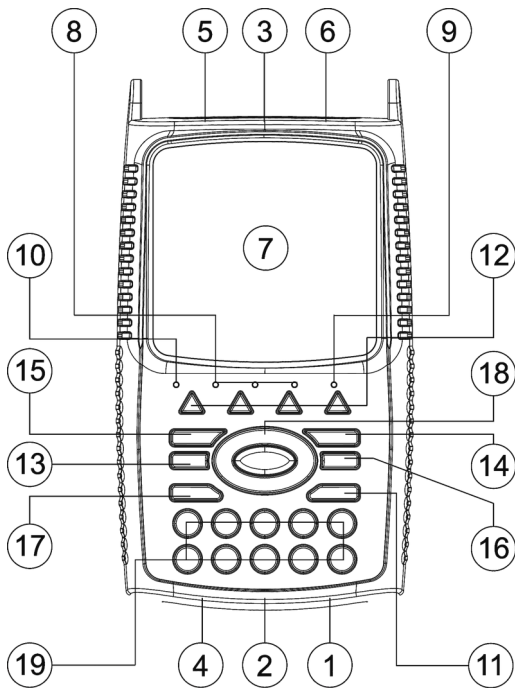

FRONT PANEL

No.	Item	Description
1	MINI USB-Port	USB port for PC connection and power supply connection
2	AV In	Input audio and video signals, Output DC 12V 2A
3	RF In	Terrestrial signal input and CCTV camera signal input(Optional)
4	USB-Port	Connect to USB or USB-HDD device
5	HDMI-Port	Connect to TV through HDMI cable
6	RF In	Satellite signal input
7	LCD-Display	Display the TV program, the operation menu and the detailed parameters.
8	22K/13V/18V-LEDs	LED lights when 22K/13V/18V switch on
9	LOCK-LED	LED lights when signal is locked
10	POWER-LED	Operation: Red: the finder is on. Off: the finder is off. Charging: Green: The battery is being charged. Orange: The battery is full.
11	Power-keys	Switch finder on/off
12	Function -keys	F1: To switch between TV program and Radio program F2: Mute F3: Switch the display F4: Display the channel information menu
13	Angle-keys	Display the angle menu
14	Find-keys	Display the find menu
15	Menu-keys	Display the main menu
16	Exit-keys	Leave the current menu, cancel operation
17	LED-keys	Switch the LED on/off
18	Navigation-keys	Switch programs ▲, ▼ Volume control ◀, ▶
	OK-keys	OK keys: confirmation for selection
19	Number-keys	Select the channel directly

➤ Charging

- If the finder is being used for the first time, it may be necessary to charge for no longer than 6 hours. If the battery runs low during use, you should recharge it for 3 or 5 hours, it will be full when the power light turns to orange from green.

Fully rechargeable Li-on batteries can last approximately 5 hours.

- It may be necessary to turn off the finder while charging. A universal charger operating on AC110V/60Hz or AC 220V/50Hz makes it usable anywhere.

➤ Turn on/off

- Press and hold the POWER button for 2 seconds, the finder will turn on.
- Press and hold the POWER button for 2 seconds again to turn off.

➤ Language setting

- From the system setting menu, you can find the language setting. Select your language and press the OK button.

➤ Restore factory setting

- From the system setting menu, you can find the factory reset item. You can choose “ Factory Reset”. Press the OK button to confirm,EXIT button to cancel.
- After a factory reset, all modified and saved contents will be lost.

➤ Satellite Finding



• Select Satellite

From the finding menu, move the cursor to Satellite, you can browse the satellites list, use [◀][▶] buttons to switch between different satellites, select the one you want, press the OK button.

Select LNB

- From the finding menu, move the cursor to LNB Type, Use [◀][▶] buttons to choose LNB Type between Single, Universal and MDU, then move the cursor to the next bar, Use [◀][▶] buttons to select the default LNB frequency. The LNB frequency must be the same as the LNB on the antenna.

Select parameter

- From the finding menu, move the cursor to Frequency, use [◀][▶] buttons to select the parameter that you want.
- If no default parameters, press the OK button to edit, you can key in the frequency, symbol rate and switch the polarization by using direction buttons and pressing the OK button.

Detect satellite signal

- After signal detected, the finder will display signals at the signal bar and beeps. View the PWR、C/N、MER、a.BER and NIT on the screen, if the value of POWER is higher, the strength of signal is better and stronger. You can also search the satellite channel list by pressing the OK button.
- From the finding menu, move the cursor to search, Use [◀][▶] buttons to choose search Type between TP, Satellite and Blind.

Value

0.0°E : show the longitude of the chosen satellite

DiSEqC : show the DiSEqC port of the chosen satellite

Az : show the azimuth angle of the chosen satellite

EI : show the elevation angle of the chosen satellite

Pol : show the polarity angle of the chosen satellite

LAT : show the local latitude

LONG : show local longitude

NIT : show the longitude of the locked satellite

C/N : show the C/N value of the locked satellite

MER : show the MER value of the locked satellite

a.BER : show the a.BER value of the locked satellite

➤ **DVB- T/T2 menu(Optional)**

- From the main menu, you can find the T/T2 options. Press OK button, the T/T2 menu will appear.
- Select Country
From the T/T2 menu, move cursor to Country, Use [◀][▶] buttons to select the Country that you want.
- Select Mode
From the T/T2 menu, move cursor to Mode, Use [◀][▶] to switch between Auto and Manual.
- Select Band
From the T/T2 menu, move cursor to Band, Use [◀][▶] to switch between UHF and VHF.
- Select Frequency
From the T/T2 menu, move cursor to Channel, Use [◀][▶] buttons to select the frequency that you want.
If no default frequency you need, press OK button to edit, you can key in the frequency by using direction buttons and press OK button in the end.
- Channel Search
From the T/T2 menu, move cursor to Search, Press OK button to start search channels.

➤ **CCTV Camera Test(Optional)**

- CCTV camera testing can help users to test, install the surveillance camera quickly and accurately. Individual output DC12V 2A, can power supply for camera in real-time.
- From the main menu, you can find the CCTV options. Press OK button, the CCTV Camera Test menu will appear.
- When a signal was input, the meter will automatically recognizes Analog, AHD, TVI camera. Press EXIT button to exit CCTV Camera test menu.
- Before using the Camera test, make sure that the CCTV cable and DV12V is properly connected.

➤ **Delete Channels**

- From the main menu, select "Channel", press [OK] to enter the channel edit menu. Use [▲/▼] buttons to choose from the options below.

TV Channels

Radio Channels

Delete ALL Channels

Delete ALL TV Channels

Delete ALL Radio Channels

Delete ALL FTA Channels

Delete ALL Scramble Channels

Press OK button to confirm

Press EXIT to cancel

➤ **Software & Parameters upgrade**

- Copy the software or parameters to the USB stick, insert the USB, the system will display "USB Device connected", navigate to the USB menu, select "USB Upgrade" item. Press [OK] to enter the software upgrade menu.

Use [◀][▶] buttons to choose Upgrade Type between USB Upgrade, Backup Data.

move the cursor to Section, Use [◀][▶] buttons to select the mode that you want, to upgrade software select Software, to upgrade parameters select CSV.

Then move the cursor to File Path, Press [OK] to select upgrade files. Press Start to upgrade the files. During upgrading, do not power off the finder.

- Download the latest software and TP lists from our website.

www.satherometers.com

➤ Notice

- Before being ready to seek satellite signal, make sure that the cable is properly connected first.
- While installing the antenna, make sure that the LNB in port of the finder is well connected to the tuner of the antenna with a tested cable. Turn the antenna in the approximate direction, the finder will light the LED bar and beep when the antenna is close to the satellite. Continue to turn the antenna in the direction that makes the finder signal bars strong and beep quicker. View the PWR value on the screen, continue to turn the antenna until the finder shows the maximum value of PWR. Set the antenna in the best position.
- Through this function, the user can quickly and easily find the right satellite and accurately set the dish.

➤ Warning

- Only qualified personnel may dismantle the device and charger.
- Do not drop the device and charger into water or fire.
- Do not shock or vibrate the device and charger.
- Make sure that the battery is fully charged while upgrading. Do not switch off the device or pull out the cable while upgrading. The device will restart automatically after upgrading.

➤ Battery & charger:

- Only use original batteries and chargers. The use of any other types may be dangerous or damage the device.
- Dispose of batteries according to local regulations.
- Do not crush or puncture the battery. Avoid extreme temperatures and high pressure.
- If left unused, a full charged battery will lose it's charge over time, please recharge before using.
- Unplug the charger from the electrical plug when no in use.

Technical Specifications

DVB-S/S2

F-type connector	IEC 169-24
Frequency range	950MHz ~ 2150MHz
Input level	-65dBm ~ -25dBm Input
Input Impedance	75Ω
LNB power supply	14/18V, Max 650mA
LNB switch control	22kHz

Demodulator

Demodulator front end	QPSK, 8PSK, 16APSK, 32APSK
Symbol rate	2Mbps~45Mbps
Measurement Unit	dBm, dBuV

DVB-T/T2

F-type connector	IEC 169-24
Input Impedance	75Ω
Input level	-85dBm ~ -20dBm
Band Width	6MHz ,7MHz,8MHz
Modulation	QPSK, 16QAM, 64QAM, 256QAM
Frequency range	174~230MHz(VHF), 470~862MHz (UHF)
Antenna power supply	5 V , max 100 mA

Connectors

Serial data interface	USB 2.0 Port
Video/audio interface	HDMI, and 3.5mm

Power supply

Supply voltage	DC12~ 14.5V 1.5A
Li-on battery	3800mAh Li-on
Working time	about 5 hours
Supply voltage (charger)	AC 110~250V 50/60Hz

Temperature

Operating temperature	0°C to + 40°C
Storage temperature	-10°C to + 50°C

Dimensions

Length x width x height	21 x 12.5 x 3.5cm
-------------------------	-------------------

Weight

Weight	0.5Kg
Gross weight	0.88Kg